


### **ASSEMBLY INSTRUCTIONS**

# Pergola Extension Kit

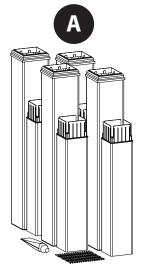

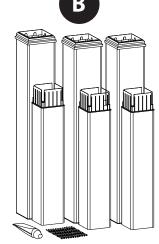

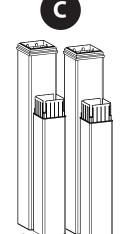





VA80350 - 4 Pack Pergola Extension Kit - White VA84350 - 4 Pack Pergola Extension Kit - Composite



VA80354 - 3 Pack Pergola Extension Kit - White



VA80352 - 2 Pack Pergola Extension Kit - White VA84352 - 2 Pack Pergola Extension Kit - Composite

Please read through before starting installation.

#### **Check Box for These Contents**

In the event of missing or defective parts please call our customer service department:

North America: 1 800 282 9346

(Mon. to Fri. 8:00 AM to 5:00 PM EST)

www.wearevita.com

V2.1/201020

#### 4 Pack Pergola Extension Kit


- 1. Top Trim Cap (4) White #10764 Composite #14055
- 2. Tall Extrusion (4) White #10175-1 Composite #14092 6" x 6" x 36" (15.25 cm x 15.25 cm x 91.5 cm)
- **3.** Bottom Trim (4) White #10765 Composite #14057
- **4.** Post Joiner (4) White #10725-1 Composite #14052
- 5. Post Extension (4) White #10254 Composite #14093 5" x 5" x 24" (12.75 cm x 12.5 cm x 61 cm)
- 6. 1 1/2" (3.8 cm) Pan Head Steel Screw (64) White #20005 Composite #20031
- **7.** Vinyl Glue (1) White #20000 Composite #20022


#### 3 Pack Pergola Extension Kit


- **1.** Top Trim Cap (3) White #10764
- 2. Tall Extrusion (3) White #10175-1 6" x 6" x 36" (15.25 cm x 15.25 cm x 91.5 cm)
- **3.** Bottom Trim (3) White #10765
- 4. Post Joiner (3) White #10725-1
- **5.** Post Extension (3) White #10254 5" x 5" x 24" (12.75 cm x 12.75 cm x 61 cm)
- **6.** 1 1/2" (3.8 cm) Pan Head Steel Screw (48) White #20005
- 7. Vinyl Glue (1) White #20000

#### 2 Pack Pergola Extension Kit

- **1.** Top Trim Cap (2) White #10764 Composite #14055
- 2. Tall Extrusion (2) White #10175-1 Composite #14092 6" x 6" x 36" (15.25 cm x 15.25 cm x 91.5 cm)
- 3. Bottom Trim (2) White #10765 Composite #14057
- **4.** Post Joiner (2) White #10725-1 Composite #14052
- 5. Post Extension (2) White #10254 Composite #14093 5" x 5" x 24" (12.75 cm x 12.75 cm x 61 cm)
- 6. 1 1/2" (3.8 cm) Pan Head Steel Screw (32) White #20005 Composite #20031
- 7. Vinyl Glue (1) White #20000 Composite #20022

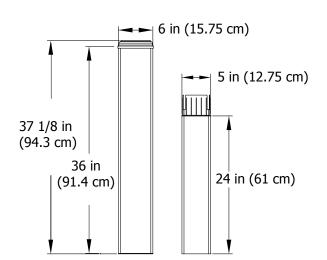



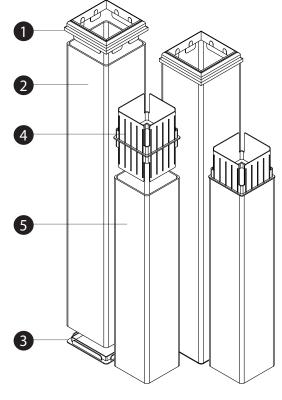

### **STEP ONE**

### **Base Molding Assembly**



Using the glue provided, run a small bead around the inside of the base molding extrusion.



Carefully place the bottom trim on one end of the base molding extrusion.



Run another bead of glue on the other (inside) end of the base molding extrusion.




Carefully place the top trim cap on the base molding extrusion.




Repeat for all base moldings.


Note: Please allow the glue to set for 15 minutes prior to installing the base molding on the pergola.



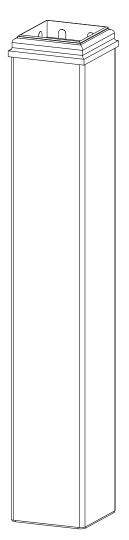





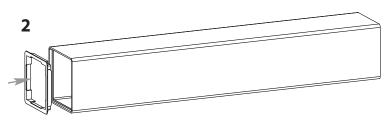









## **STEP TWO**

## **Post Extension Assembly**



Using the glue provided, run a small bead around the inside of the Post Extension as shown.




Carefully place the post joiner in the post extension.




Repeat for all Post Extensions.

Note: Please allow the glue to set for 15 minutes prior to installing the post extension on the pergola.


1



2



3



#### **Post Extension Installation**



Identify the bottom of the pergola post; in most cases, the top of the pergola post will have pre-routed holes.



Slide the base molding assembly over the pergola post through the bottom side as shown.

3

Apply a bead of glue to the (bottom) inside of the pergola post.

4


Insert the post extension assembly from the previous step.


5

After installing the pergola post (with extension) over the wooden post, fasten the post extension to the wooden post using sixteen screws provided. Screws should be roughly 1 in (2.5 cm) above and 1 in (2.5 cm) below the seam of the post joiner. Keep the screws within the 3" (7.6 cm) center of the column to allow the base mold to slide over them. (see illustration).


6


Lower the base molding to cover the post extension.

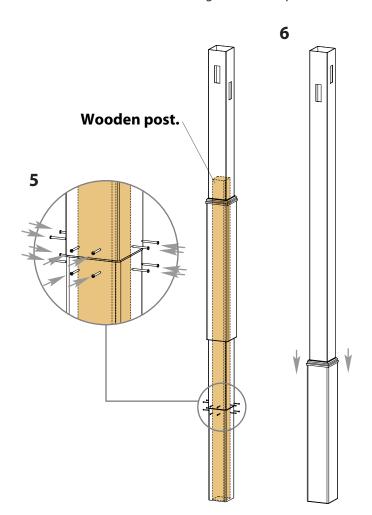

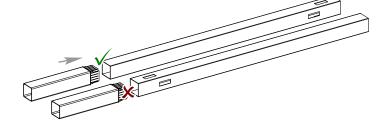



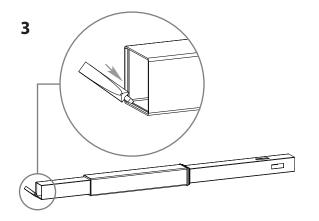



#### Notes:

- 1. Ideally the post extension should be installed *before* the pergola posts are installed.
- 2. This extension is designed to extend the pergola posts by 24" (61 cm); if a shorter height is desired, the post extension (part#5) can be cut down to accomodate a shorter extension. Use a fine-tooth blade saw.
- 3. Typically the wooden post should also be extended by the same height as the post extension.

